


# Highest flexibility

by using our vapour recovery pump MEX 0544

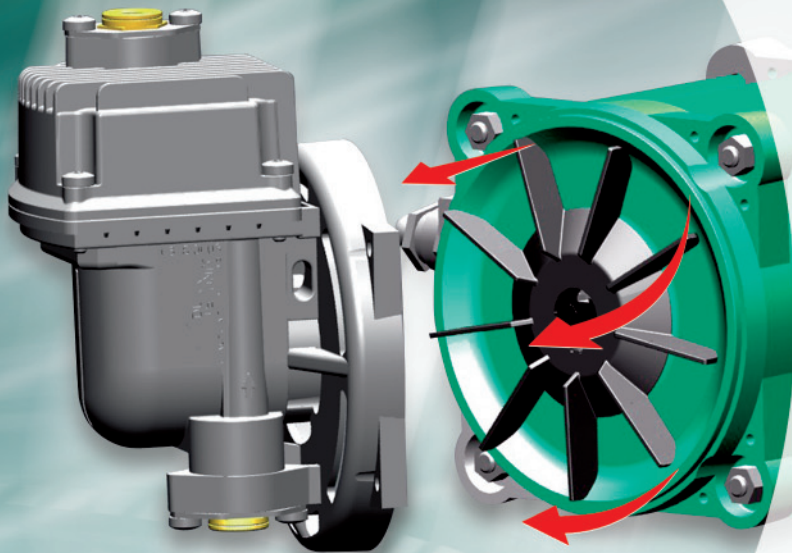

DÜRR TECHNIK offers a unique vapour recovery pump. From now on a more simple and quick exchange of the pump is possible all over the world. The new and unique design of the MEX 0544 enables the head of the pump to be dismantled without dismantling the motor. Loosen the screws (4), take off the pump, tighten the new pump – that's it!

#### Unbeatable customer service!


With a minimum of labour input the pump is immediately ready for operation. The universal compact pump head fits all motor versions. In case of a service only the pump needs to be exchanged no longer the complete unit (motor + pumps). The costs for transportation and storage will be reduced due to the light weight and small packing dimensions.

#### Available motor versions:

Voltage: 110V, 230V, 400V

Frequency: 50Hz or 60Hz

Start/Stop Relays: 24VDC, 24VAC, 230VAC

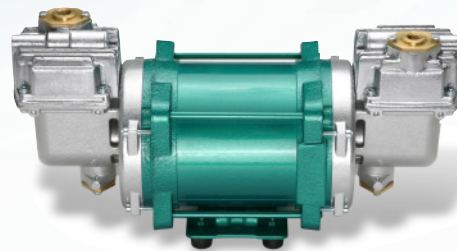

#### Convincing arguments of the vapour recovery pump MEX 0544 are:

- Detachable pump head for a quick and cost-saving service
- ATEX and TÜV certifications
- Patented pre-chamber with drainage system
- Long service life
- Wide temperature operating range -40°C to +60°C

- Self-adjusting piston lining for a constant volume flow throughout the whole lifetime
- Small and robust, suitable for installation at the manufacturer or retrofitting
- Suitable to work with either mechanical or electric proportional valves
- Flame arresters on the in- and outlet
- suitable for blended fuels with ethanol up to 90 %